

MAGX²

P23 Procedure Transmitter Exchange



Arkon Flow Systems

Nováčkova 11, 614 00 Brno, Czech Republic

Tel. +420 543 214 822

Enquiries/ Orders/ General questions: arkon@arkon.co.uk

Marketing support/ Brochures: marketing@arkon.co.uk

Technical support: support@arkon.co.uk

www.arkon.co.uk

Step 1

Switch off the flowmeter. Open the Transmitter housing.


**Step 2**

Disconnect the sensor and power supply.

Step 3


For remote version:

Unscrew the four imbus 2,5mm screws at the cable output on the transmitter side.

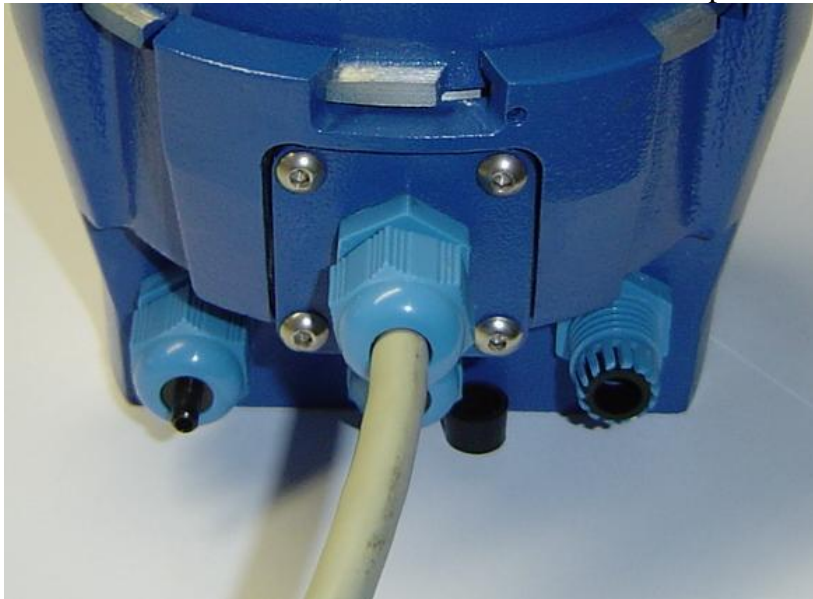


For Compact version:

Unscrew the four imbus 3mm screws

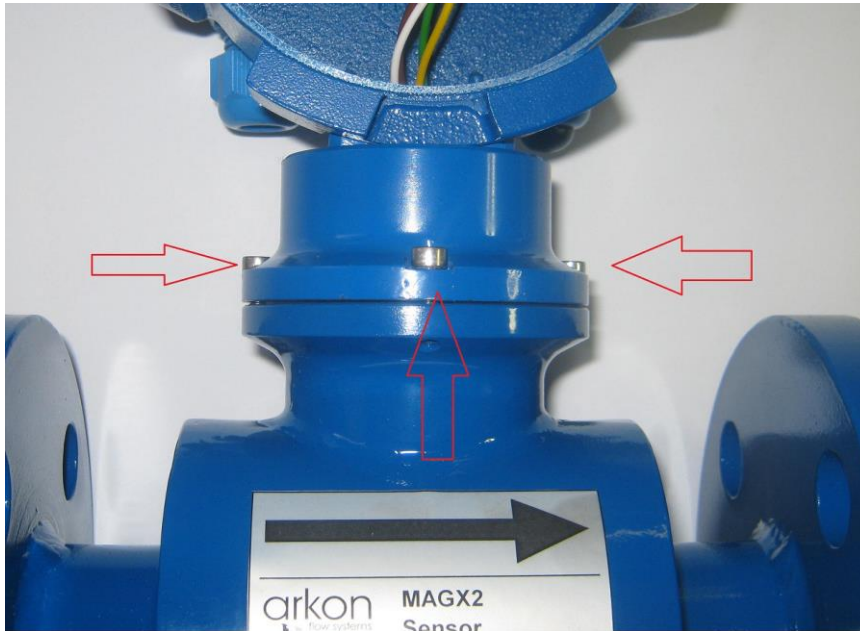

Disconnect up part of the neck by unscrewing four imbus 3mm screws.

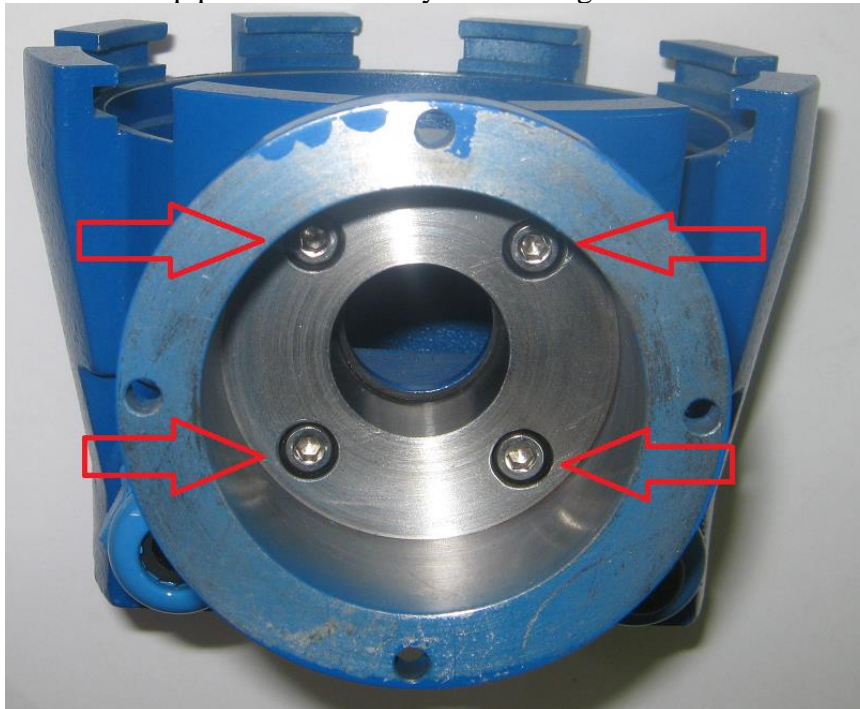

Step 4

Exchange the transmitter for a new one and repeat all steps in reversed order. Don't forget all sealings.

Step 5

Now make all your settings of a new transmitter