

MAGX²

P25 Firmware Update



Arkon Flow Systems
Nováčkova 11, 614 00 Brno, Czech Republic
Tel. +420 543 214 822
Enquiries/ Orders/ General questions: arkon@arkon.co.uk
Marketing support/ Brochures: marketing@arkon.co.uk
Technical support: support@arkon.co.uk
www.arkon.co.uk

LIST OF CONTENTS

1. Micro SD Card – Card reader	2
2. Preparing the Micro SD Card for update	3
3. Update firmware	4
4. Starting the update	5

1. Micro SD Card – Card reader

You will need a micro SD card with micro SD card adapter or SD card reader with micro SD card slot.



Connect the card reader to the computer or laptop.

If you have a laptop with card reader you do not need an external card reader device. You only need a micro SD card with micro SD card adapter.




External card reader with micro SD card connected to the USB slot




Micro SD card inserted in micro SD card adapter and plugged into the laptop card reader

2. Preparing the Micro SD Card for update


Open SD card removable disk

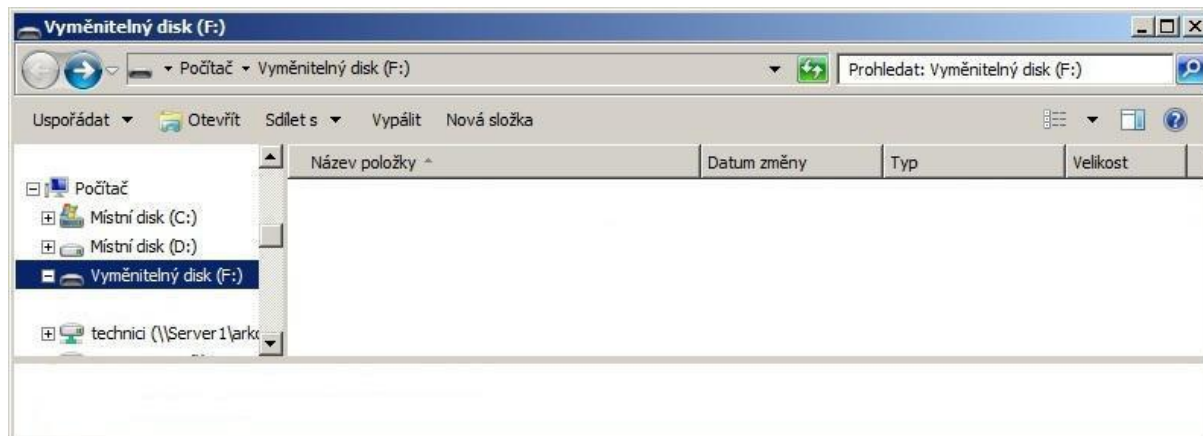

Create new folder "Update"

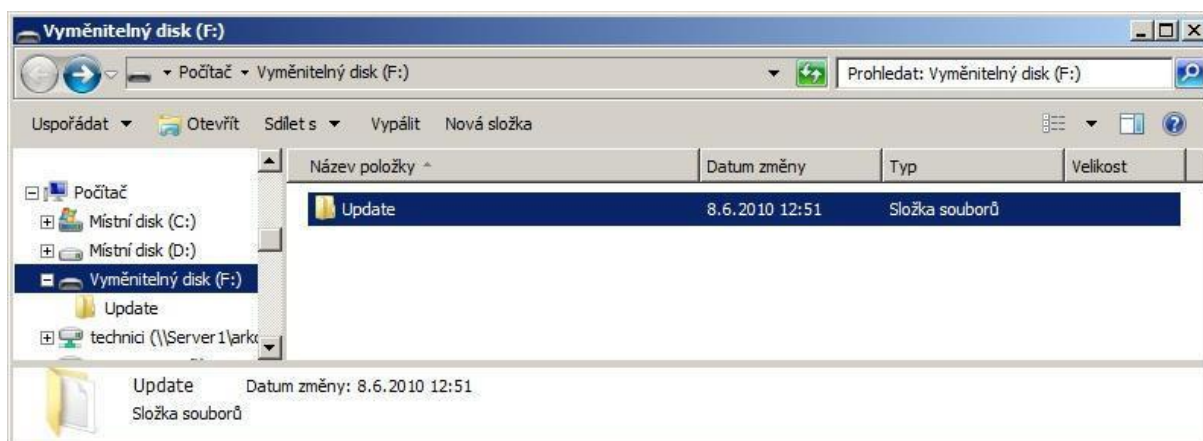

And copy app.bin file into the Update folder

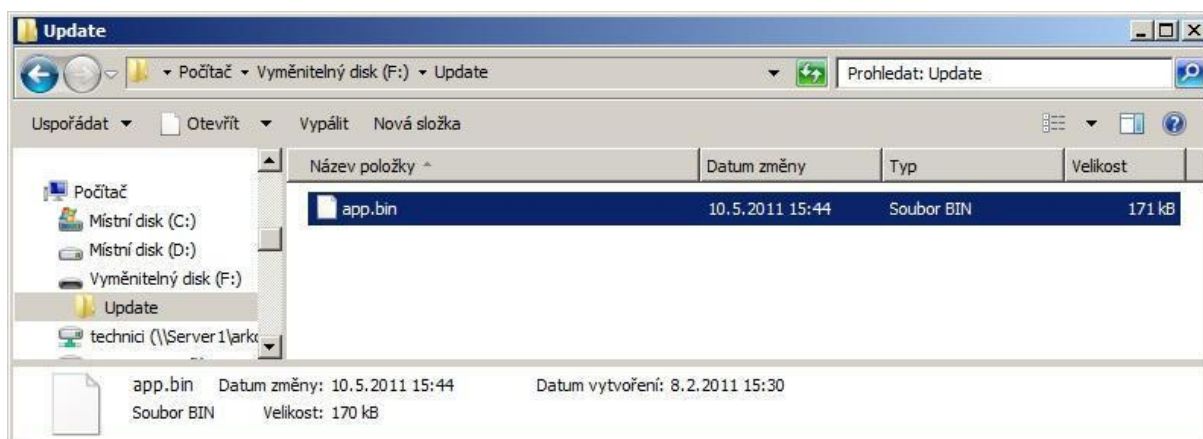

3. Update firmware

Turn off the power supply and unscrew the blind screw under the enter button.




Insert the micro SD card into the MAGX2 transmitter micro SD card slot



4. Starting the update

Turn on the power supply and wait for "Update successful" message.

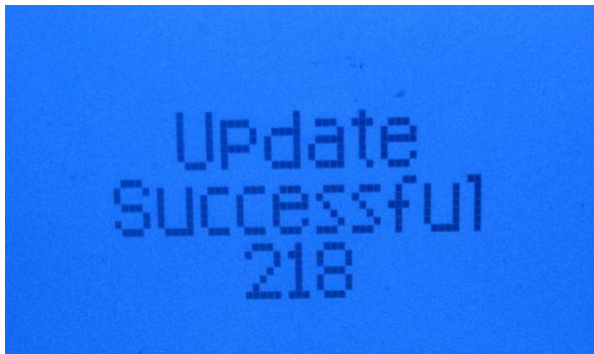

Turn off the power supply
Unplug the micro SD card from the transmitter
Replace the blind screw back into the transmitter



If you need to update more units continue with point 3.



If you insert SD-Card with MAGX2 firmware (app.bin), after each restart the update will be made. If you use same SD-Card for Datalogger and Firmware update, its strongly recommended to delete the Firmware update from SD-Card or rename the file. The unit can lost the totalizers value after firmware update.